

Quick User Guide



5330 IP Phone



NN0230

- | | |
|--|---------------------|
| 1 Display | Speaker |
| 2 Ring/Message Indicator | Mute |
| 3 Volume, Speaker and Mute Controls | Applications |
| 4 Fixed Function Keys | Cancel |
| 5 Keypad | Redial |
| 6 Navigation Page Keys | Hold |
| 7 Programmable Feature Keys and Softkeys | Transfer/Conference |
| 8 Speaker | Message |
| 9 Handset | |



Contact: 0845 835 0521

Make a Call

- 9 Lift the handset OR
- 3 Press .
- 5 Dial the number OR
- 7 Press a **Speed Call** key OR
- 4 Press OR
- 5 Dial the prefix for external calls (e.g. 9) and the number.

Answer a Call

- 9 Lift the handset OR
- 3 Press , and begin speaking.

End a Call

- 4 Press OR
- 9 Replace the handset.

Place a Call on Hold

- 4 Press . The line key flashes.
- 9 Replace the handset if necessary.

Retrieve a Call from Hold

- 9 Lift the handset OR
- 3 Press .
- 7 Press the flashing line key.

Retrieve a Message

- 4 Press . It flashes when a message is waiting. Follow the voice mail prompts to retrieve your message.

Transfer a Call

- 4 Press .
- 5 Dial the number. Wait for an answer.
- 9 Hang up OR announce the transfer and then hang up.

Conference a Call

- 4 Press .
- 5 Dial the number. Wait for an answer.
- 4 Press .

Program a Speed Call

- 4 Press **Applications** OR .
Press **Settings**.
Press **Programmable Keys**.
Press the key you wish to program.
Press **Speed Call**.
Press **Edit Label** and enter the label for the Speed Call.
Press **Save**.
Press **Edit Number** and enter the phone number for the Speed Call.
Press **Save**, and then press **Save** again.
Press **Close** and then press **Close** again.

Adjust Volume Levels

Adjust ringer volume while the phone is ringing. Adjust handset or speaker volume while using the handset or speaker.

- 3 Press repeatedly to raise the volume OR repeatedly to lower the volume.
- 3 Press to mute your microphone.